

DROP-IN COCKTAIL STATION USE AND CARE GUIDE MODELS DCS30 & DCS42



DCS42
with optional faucet

Thank you for purchasing the Glastender Drop-in Cocktail Station. We appreciate your support of American manufacturing. The Drop-in Cocktail Station is a high quality, commercial-grade product that, if cared for properly, will bring you many years of enjoyment.

ASSISTANCE OR SERVICE

When calling for assistance, please have your model number, serial number, and date of purchase information available, as this information will help us to better respond to your request.


In the USA and Canada, you may contact Glastender, Inc. toll free at 800-748-0423. Office hours are Monday through Friday, 8am to 5pm EST. Please ask for the Technical Service Department.

Our complete contact information is as follows:

Glastender, Inc.
5400 North Michigan Road
Saginaw, MI 48604-9780
800-748-0423 · 989-752-4275
Fax: 989-752-4444
email: info@glastender.com
web: www.glastenderhome.com

INSTALLATION

1. Remove the Drop-in Cocktail Station from the packaging. Be careful not to discard any loose parts.
2. Peel off the protective white plastic sheets wherever it is covering the stainless steel. The silver tape on the sink bowl and drainboard (if applicable) is for sound deadening, so do not remove it.
3. The drop-in cocktail station comes with a stiffener channel in place to protect it during shipment. The stiffener channel is held in place by the ice bin mounting assemblies. Loosen the extension bolts by turning them clockwise (the opposite of what you might normally think) so that you can remove the stiffener channel (see photo 1). The stiffener channel can be discarded. We recommend recycling it.

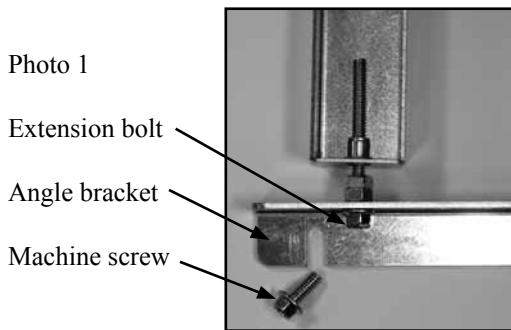

4. The ice bin mounting assembly is secured to the front and back of the ice bin by three 1/4x20 machine screws (see photo 1). Remove the mounting assemblies from the front and back of the ice bin by removing the three machine screws that secure each assembly. It is best to completely remove the screws and reinstall them after the drop-in cocktail station has been installed into the counter.
5. Make a cut-out in the counter top for the drop-in cocktail station in the desired location. Cut-out dimensions are:

Cutout Dimensions:	<u>DCS30</u>	<u>DCS42</u>
Width:	28-1/2"	40-1/2"
Depth:	17-1/2"	17-1/2"

Make sure that the ice bin and sink bowl section of the cocktail station will land within one continuous cabinet section. Approximately 2-1/2" of clearance at the front and back are required to install the mounting assemblies, so locate the cut-out accordingly.

6. The drop-in cocktail comes with two corner mounting studs for the sink end of the unit. Model DCS42 comes with two corner mounting studs for the drainboard end also. Remove the nut and C-channel washer from each of the mounting studs provided. Insert one stud into each corner of the sink end of the station (and each corner of the drainboard end if applicable) by sliding the triangular-shaped plate at the end of the stud into the hem on the underside of the work surface. See photo 2 and 3.
7. Trial fit the cocktail station by placing it in the cut-out. Be careful to lift the cocktail station by the front and back flange rather than the ends to avoid possible damage to the work surface. If necessary, remove the cocktail station and adjust the cut-out to get the proper fit.

8. Once you have confirmed the unit is fitting properly into the cut-out, remove it one last time to prepare for final installation.
9. Apply a bead of clear silicone sealant (not included) around the perimeter of the cut-out.
10. Set the cocktail station in place. Two people are recommended so that the second person can assist by holding the underside of the cocktail station from below the counter top. Press down to secure.
11. Attach the C-channel washer and nut to each of the mounting studs. Tighten each nut a little in succession rather than tightening one nut all the way down at a time. Be careful not to over tighten the nuts. You just need to achieve a snug fit.
12. To install the ice bin mounting assemblies to the front and back of the ice bin section, start by putting the three 1/4x20 machine screws removed in step #3 back in place. Leave them loose so that the angle bracket of the mounting assembly can slid into place. Position the front and rear ice bin mounting assemblies and tighten the three machine screws that hold each of them in place. Do not over tighten.
13. Turn the two extension bolts on each mounting assembly counterclockwise to secure the mounting assembly to the underside of the counter top. Be careful not to over tighten the extension bolts. You just need to achieve a snug fit.
14. If any silicone seeps from under the flange, carefully wipe away with your finger. Allow 24 hours for the silicone to cure before use.
15. Plumb the faucet and drains in accordance with local plumbing requirements. The drain fitting is provided for the sink and drainboard (if applicable).
16. Set the drainboard insert in place inside the drain pan.

Installation continued on following page

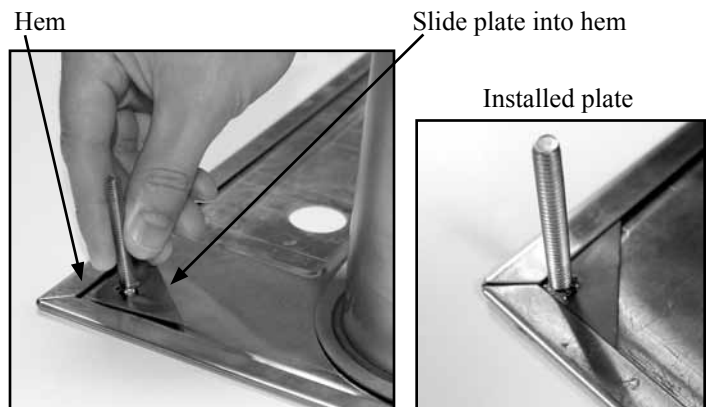


Photo 2

Photo 3

INSTALLATION CONTINUED

17. Install the stainless condiment cup holder in the back (side opposite bottle rail) of the cocktail ice bin to allow the lid of the cup container to open to the back. The flanges on the left and right side of the cover should rest inside the black thermal barrier strip around the ice bin liner. Insert the 3 plastic condiment cups into the rectangular cutouts of the condiment cup holder.

Stainless condiment cup holder with plastic condiment cups inserted



18. Install the ice bin cover with the handle up and toward the front of the unit. The left and right bottom edges of the cover should ride on the black thermal barrier strip around the ice bin liner.

Ice bin cover




USE

Drain Screen

A drain screen has been provided in each ice bin liner to prevent debris from clogging the drain. Typically, the debris can just be picked out of the ice bin liner. The drain screen is removable for cleaning. Only remove the drain screen after all water has been drained and all debris has been removed from the ice bin. Use a small standard screwdriver to lightly pry the drain screen out of the drain. The screen is made of stainless steel, so use the same precautions when cleaning it. Rinse the screen under a faucet to remove debris and use a nylon brush if necessary.

IMPORTANT: Be careful when handling the drain screen, as the edges of the screen may be sharp.

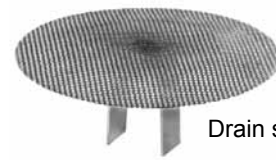

Drain screen

Sliding Cover

The cover of the ice bin slides back and forth for access. There is no need to lift it up or off during operation.

GENERAL CLEANING

IMPORTANT: Always follow label instructions on cleaning products. Soap, water and a soft cloth or sponge are suggested first unless otherwise noted.

To avoid weather damage please cover the unit when not in use or store in a covered area.

Stainless Steel Care & Cleaning:

Stainless steel will stain or rust if not cared for properly. Please pay attention to the following guidelines:

1. **Use the proper tools** – Use non-abrasive tools, such as a soft cloth or plastic cleaning pad. NEVER use steel wool pads, soap filled scouring pads, abrasive cleaners, cleaners containing chlorine, Cooktop Polishing Creme, or gritty washcloths.
2. **Clean with the polish lines** – Always scrub in a direction that is parallel to the grain or lines in the stainless steel.
3. **Clean regularly** – Make cleaning easier by doing so frequently to avoid build-up of hard, stubborn stains. Use alkaline, alkaline chlorinated, or non-chloride containing cleaners.

4. **Rinse and wipe** – Anytime chemicals are used to clean stainless steel, make sure to rinse afterward with clean water and wipe away any standing water.
5. **Never use hydrochloric acid (muriatic acid) on stainless steel.**

Recommended cleaners for specific situations:

Stainless steel needs to be cleaned for aesthetic considerations and to preserve corrosion resistance. Stainless steel actually thrives with frequent cleaning, and, unlike some other materials, it is impossible to “wear out” stainless steel by excessive cleaning.

Routine cleaning - Use warm water, liquid detergent, ammonia, or all-purpose cleaner. Apply with soft cloth or sponge. Rinse with clean water and dry with a soft cloth.

Food spills - *Clean Immediately.* Use a stainless steel cleaner and polish. Apply with a soft cloth or sponge.

Fingerprints and smears - Use a stainless steel cleaner and polish or glass cleaner. Apply with a soft cloth or sponge.

Hard water spots - Remove with vinegar. Apply with a soft cloth or sponge.

GLASTENDER HOME PRODUCT WARRANTY

Limited Warranty

For one year from the date of purchase, when this product is operated and maintained according to the instructions attached to or furnished with the product, Glastender, Inc. will pay for Factory Specified Parts and repair labor to correct defects in materials and workmanship. Service must be authorized by the Factory in advance and must be performed by a Glastender, Inc. designated service company. This limited warranty is valid only in the United States and Canada and applies only when the product is used in the country in which it was purchased. Outside the 50 United States and Canada, this limited warranty does not apply. Proof of the original purchase date is required to obtain service under this limited warranty.

Items Excluded from Warranty

This limited warranty does not cover:

1. Service calls to correct the installation of your product, to instruct you how to use your product, or to correct house wiring or plumbing.
2. Cosmetic damage, including scratches, dents, chips or other damage to the finish of your product, unless such damage results from defects in materials or workmanship and is reported to Glastender, Inc. within 30 days from the date of purchase.
3. Repairs when your product is used for other than normal, single-family household use or when it is used in a manner that is contrary to published user or operator instructions and/or installation instructions.
4. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of consumables or cleaning products not approved by Glastender, Inc.
5. Cost associated with the removal from your home of your product for repairs. This product is designed to be repaired in your home and only in-home service is covered by this warranty.
6. Repairs to parts or systems resulting from unauthorized modifications made to the product.
7. Expenses for travel and transportation for product service if your product is located in a remote area where service by an authorized Glastender, Inc. service agent is not available.
8. The removal and reinstallation of your product if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.
9. Damage resulting from normal wear and tear of your product.
10. Products with original model and serial numbers that have been removed, altered or cannot be easily determined. This warranty is void if the factory applied serial number has been altered or removed from your product.

The cost of repair or replacement under these excluded circumstances shall be borne by the customer.

DISCLAIMER OF IMPLIED WARRANTIES: LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. GLASTENDER SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIAL LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Please keep this document and your sales slip together for future reference. You must provide proof of purchase or installation date for in-warranty service.

Record the following information about your product to better help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number tag located on the product.

Dealer name: _____

Address: _____

Phone Number: _____

Model Number: _____

Serial Number: _____

Purchase Date: _____